



cideko

BEYOND DIGITAL

# User Manual

## Air Keyboard









### Air Keyboard

Long Distance Transmission

3D Mouse Plug & Play  
Wireless Keyboard

# Air Keyboard User Manual

## Safety Information

-  1. Do not use this product near water or moisture.
-  2. This product is NOT weatherproof.
-  3. Clean only with a dry lint-free cloth.  
Disconnect the power source before cleaning.  
Do not use any chemicals or cleaners.
-  4. Do not install or use near any open flame or heat sources, such as radiators, heat registers, stoves, grills, or other devices that produce heat.
-  5. Do not expose to direct sunlight.
-  6. Only use accessories specified by the manufacturer.

---

## Warranty Information:



Air Keyboard comes with a 2 year limited warranty. Please contact your dealer for details in case of warranty claims. The warranty will void in the case that the defect has been caused by misuse, neglect, improper installation, repair, alteration or accident. Cideko bears no responsibility for failure or defect caused by any third party product or components whether authorized or not.

## Important Safety Instructions

1. Read and Keep this manual
2. Always consider the environmental issues and follow local regulations when disposing of batteries. Using rechargeable batteries is recommended. If you will not use the product for a long period of time, please remove the batteries to avoid leakage or corrosion. When installing batteries (AA/R6) into battery compartment, please make sure the positive (+) and negative (-) ends of each battery match with the polarity indicators in the battery compartment.
3. Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as liquid had been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.

## Product & Accessories

1. Air Keyboard\*1
2. Air Dongle\*1
3. User Manual\*1
4. AA Battery\*2

## Features

Number of Keys: 80.

Power saving function: Air Keyboard switches to power saving mode after idling for 10 seconds. After idling for 3 minutes, Air Keyboard switches to Hibernating mode to save power consumption. Press any key to wake it up.

Battery: 2 x AA (Alkaline or Ni-MH).

Dimension : 142(L)x88(W)x32.9(H)mm.

## Specifications

Frequency Range: 2400~2483MHz.

Operating Voltage: 2.0~3.0V.

Battery Life: >50hr for constant usage.

Supported OS: PC: Windows 98/ME/2000/XP/Vista, 7.

Mac: OS X (v10.2 or later version); Linux.

The effective range is up to 50 meters by wireless technology with Air Dongle.

9 hot keys for controlling multimedia functions.

Motion sensing air mouse.

Left and Right mouse buttons.

LED Indicators: Power, Connection, Low Battery.

## Installation Guide

### 1. Installing Air Dongle

Air Keyboard does not need any drivers or setup. After connecting the Air Dongle to the USB port of the computer, the system will automatically search for Air Keyboard and establish a connection.



### 2. Installing Batteries

Note:

1. When the batteries have no more power or when they are not used for a long period of time, please replace.
2. Do not mix new and old batteries or different types of batteries.
3. If you intend not to use the product for a long period of time, remove the batteries to avoid damage from leakage and corrosion.
4. Always consider the environmental issues and follow local regulations when disposing of batteries.
5. Batteries running out of power should be removed as soon as possible to prevent damage from leakage or corrosion.



Fig 1: Open the lid of the battery compartment.



Fig 2: Place 2 batteries (AA/R6) into the compartment. Make sure the positive and negative ends of each battery match with the polarity indicators in the compartment.

 



Fig 3: Replace the lid and push it back until it locks into position.




### 3. Turn on Power





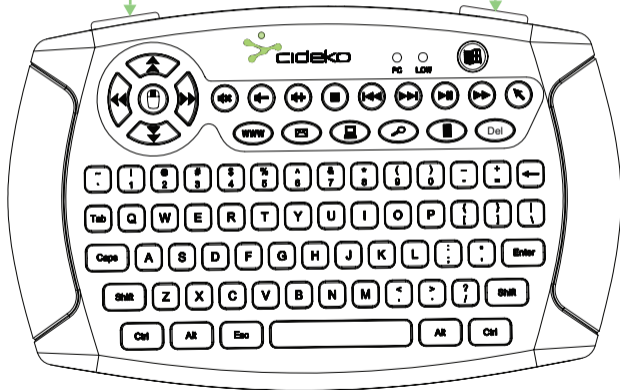 




Click the mouse left click button to turn on the power of Air Keyboard.

Mouse left click

Mouse right click



|   |                               |
|---|-------------------------------|
|  | Windows                       |
| <b>PC</b>   | PC                            |
|  | Mute                          |
|  | Volume down                   |
|  | Volume up                     |
|  | Stop                          |
|  | Previous                      |
|  | Play/Pause                    |
|  | Fast forward                  |
|  | Next                          |
|  | Disable/enable mouse function |

|   |                          |
|---|--------------------------|
|  | Up                       |
|  | Left                     |
|  | Right                    |
|  | Down                     |
|  | Middle mouse             |
| WWW   | Internet Explorer        |
|  | Microsoft Office Outlook |
|  | My Computer              |
|  | Search                   |
|  | Calculator               |
| Del   | Delete                   |


## Troubleshooting:

If Air Keyboard does not work properly, please follow these troubleshooting methods.

1. Make sure the batteries are properly installed and the batteries contain enough power. When the remaining power is lower than DC2.2V, the mode indicator will blink twice every 10 seconds.

Air Keyboard will power off automatically when the power is lower than DC2.0V. You need to replace new batteries.

 
2. If Air Keyboard does not work properly even with sufficient power, please remove Air Dongle and batteries. Then, replace batteries and reconnect Air Dongle and try again.
3. The pairing between Air Dongle and Air Keyboard was completed before shipment. If the above steps does not solve your issue, it might be that the pairing was lost, perform the following pairing steps again:

- 1) Install batteries in Air Keyboard and connect Air Dongle to the computer.
- 2) Bring Air Keyboard next to Air Dongle. Press and hold the button on Air Dongle. Press the “Windows”  and “mouse right click” buttons at the same time.

Air Keyboard will search for Air Dongle and the green LED indicator will be blinking.

Hold down the button on Air Dongle until the blue light on Air Dongle is no longer blinking and stays on and the green indicator on Air Keyboard stays on for 2 seconds. The pairing is now completed and you can start using Air Keyboard.

If Air Keyboard does not work correctly after the above steps are performed 3 times, please consult your dealer.

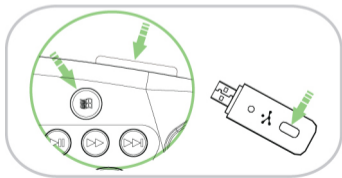



cideko

BEYOND DIGITAL

[www.cocoonsystems.com.au](http://www.cocoonsystems.com.au)

Proudly imported and distributed by  
General Wholesale Pty Limited