 
The logo for 'converge' features the word in a bold, lowercase sans-serif font. Above the 'e' is a stylized graphic consisting of a curved line with a small grey dot at its peak, resembling a signal or a connection point.

**converge**<sup>TM</sup>

Loudspeaker System

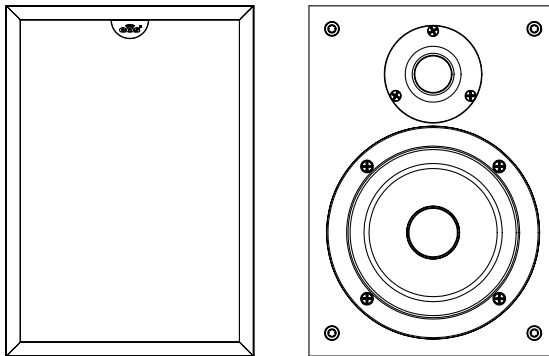

## **User Manual**

**Manual del utilizador**

**Manuel d'utilisation**

**Manual del utilizador**

**Manuel d'utilisation**

**Manuel d'utilisation**

The logo for 'eos wireless' features the word 'eos' in a bold, lowercase sans-serif font. Above the 'o' are three curved lines representing a signal or wireless connection. Below 'eos' is the word 'wireless' in a smaller, lowercase sans-serif font.

**eos**<sup>TM</sup>  
wireless

English

Español

Français

Deutsch

Italiano

## Thank You For Choosing Eos Wireless!

We hope you will get much enjoyment from our wireless audio system.

Please read the entire contents of this manual. It is filled with reference information that will allow you to get the most from your new Eos system. If you have any questions, please check our web site at [www.eoswireless.com/support](http://www.eoswireless.com/support) or call us at 877-465-3927.

Your Total Satisfaction – Eos Job #1

Congratulations on your purchase of the Eos Loudspeaker System. We are committed to making sure your experience is problem free.

### US Customers

If you experience any difficulty and/or have any questions regarding the Eos system that are not addressed in this manual, please feel free to contact the Eos Technical Support Team, toll-free, at 877-465-3927 (between the hours of 8:30AM and 5PM pacific time.)

Our Eos Support Team aims to offer quick, comprehensive and thorough technical support to all our users. Before you call, please make sure you have your Eos unit model number and serial number on hand. These numbers can be found on the label located on the back of the speaker.

### International Customers

If you experience **any** difficulty and/or have any questions regarding the Eos system that are not addressed in this manual, please contact the retailer that you purchased your Eos system from. Before you call, please make sure you have your Eos unit model number and serial number on hand. These numbers can be found on the label located on the back of the speaker.



[www.eoswireless.com](http://www.eoswireless.com)

[www.eoswireless.com/eu](http://www.eoswireless.com/eu)



## Introduction

Eos loudspeakers are designed to deliver natural and accurate music reproduction. Eos loudspeakers are acoustically matched to obtain the best sound from your Eos Converge Amplified Receiver. To achieve the best sound from your Eos loudspeakers, please take a moment to read the instructions contained in this setup guide.

## Speaker Placement

 
For best stereo imaging, the left and right speakers should be the same distance from their respective side walls. To reduce bass, it is best to place the speaker at least 12" (.3M) from the wall behind the speaker. It also is best for the speakers to be placed at an equal distance from the listening position

**Note:** Eos loudspeakers are magnetically shielded to allow them to be placed near a television or computer monitor. If you notice any discoloration or distortion of the television or monitor's display, move the speakers away from the device.

## Speaker Wire Connection

When making connections, ensure that none of the strands of speaker wire come in contact with an adjoining speaker terminal.

1. Use your fingers to loosen the screw terminal to reveal the connection hole.
2. Insert the stripped end of the gold colored wire to the speaker terminal hole marked "+" then tighten the screw terminal. Insert the stripped end of silver colored wire to the terminal hole marked "-" then tighten the screw terminal. The stripped portion should be caught firmly in the connector post.
3. Repeat this procedure to setup the second loudspeaker.

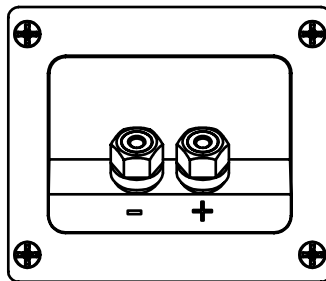


# Eos Loudspeaker Connection

## Amplified Receiver Wire Connection

Follow the diagram below to connect your speakers to the Eos Converge Amplified Receiver.

1. Use your thumb or fingers press the spring-loaded terminal tab to open the connection hole, once the stripped portion of the wire is in the hole, release the terminal tab. The wire should be caught firmly in the connector hole.
2. Connect the stripped end of gold colored wire to the speaker terminal hole marked "+" (red). Insert the stripped end of silver colored wire to the speaker terminal hole marked "-" (black)
3. To help obtain a better connection, it is important to pull slightly the wires after these have been secured in the terminals. This will cause the teeth inside the connectors to 'bite' into the wire.


 
Note - Mismatching of polarities will result in a distorted sense of sound direction. If this occurs, re-check the wiring.

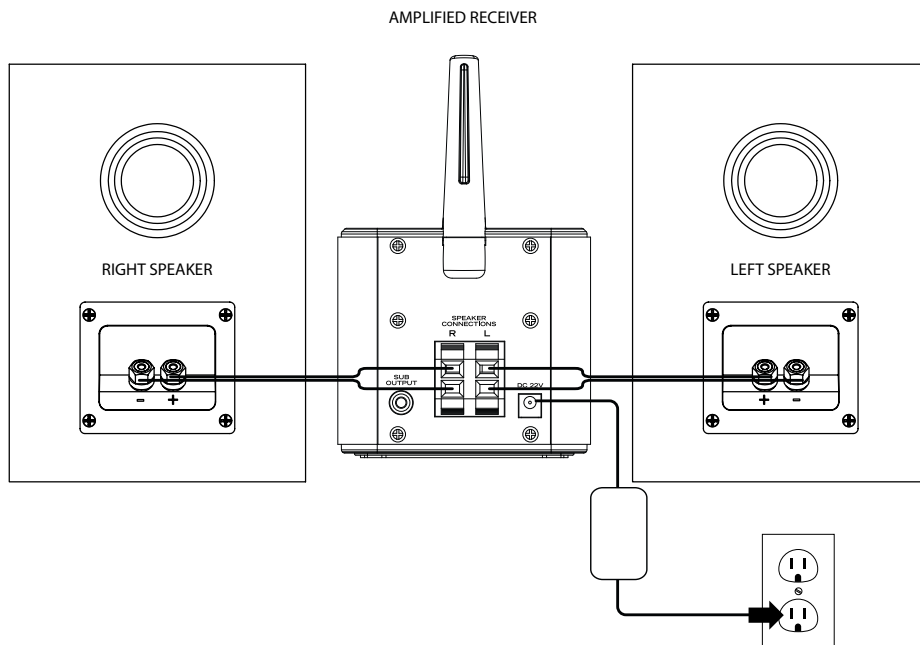

# Eos Loudspeaker Specifications

## Specifications

  Frequency Response	70Hz-20kHz +/-3dB
Sensitivity	83dB @ 2volts/1 meter
Nominal impedance	4 ohms
Crossover frequency	3.5kHz
Power handling	25 watts (50 watts peak)
Drive components	1 in. (2.5 cm) silk dome driver with 5.5 in. (14 cm) magnetically shielded polypropylene cone woofer
Dimensions	9.8" x 7.5" x 7" (251mm x 192mm x 179mm)
Speaker Enclosure	Bass Reflex
Weight	8.25 Lbs. (3.74KG) for each speaker
Cabinet Finish	Black Ash
Speaker cable	10 ft. of 18-gauge cable provided for each speaker
Speaker Connectors	Binding Posts
Package contents	Two Loudspeakers

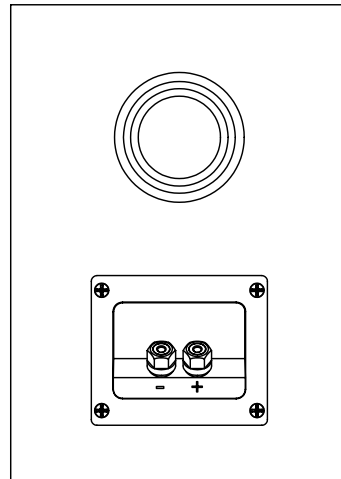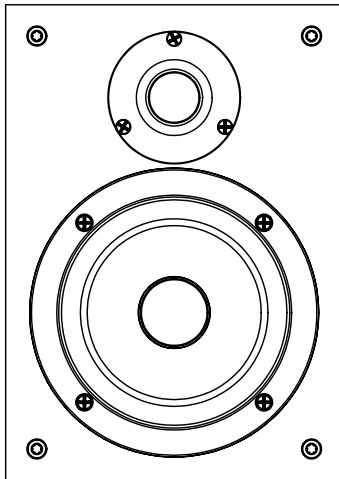

## Limited Warranty US

IntelliTouch warrants this product to be free from manufacturing defects in material and workmanship under normal use and conditions for a period of 1-year from date of original purchase in the United States. In order to validate your warranty, you must register your product by going on-line ([www.eoswireless.com](http://www.eoswireless.com)), or by calling 877-465-3927 between Monday through Friday, 8:30AM to 5PM Pacific Time. For Warranty service outside the United States, contact the reseller that you purchased the Eos product from.

Should service be necessary under this warranty for any reason due to manufacturing defect during this 1-year period from date of original purchase, IntelliTouch will either repair the unit or replace it with a reconditioned unit at no charge.

***U.S. Warranty Service - You must call (877-465-3927) to obtain a return authorization number prior to sending your product in for service.***

### **Pack the unit in a well-padded, heavy, corrugated box.**

- Include a note with reason for return along with RMA number and return shipping information.
- Enclose proof of purchase.
- Enclose your check or money order payable to IntelliTouch in the amount of \$20.00 to cover shipping and handling costs.
- Enclose your name, return address and contact number.
- Ship the unit prepaid via UPS or parcel post (insured).

### **This warranty is void if the product is:**

1. Damaged through negligence, misuse, abuse, moisture or accident.
2. Modified in any way.
3. Damaged because it is improperly connected to the equipment of other manufacturers.

### **This warranty does not cover:**

1. Damage to equipment not properly connected to the product.
2. Costs incurred in the shipping of the product to IntelliTouch.
3. Damage or improper operation of unit caused by customer abuse, misuse, negligence, or failure to follow instructions in the manual provided with the product.
4. Ordinary adjustments to the product that can be performed by customer as outlined in the manual.
5. Damage to computer or audio equipment



## Limited Warranty Outside US

IntelliTouch warrants this product to be free from manufacturing defects in material and workmanship under normal use and conditions for a period of 2-year from date of original purchase. In order to validate your warranty, you must register your product by going on-line ([www.eoswireless.com/eu](http://www.eoswireless.com/eu)). Should service be necessary under this warranty for any reason due to manufacturing defect during this 2-year period from date of original purchase, IntelliTouch will either repair the unit or replace it with a reconditioned unit at no charge.

Note: This warranty is void if the product is:

- (a) Damaged through negligence, misuse, abuse, moisture or accident.
- (b) Modified in any way.
- (c) Damaged because it is improperly connected to the equipment of other manufacturers.

This warranty does not cover:

- (a) Damage to equipment not properly connected to the product.
- (b) Costs incurred in the shipping of the product to IntelliTouch.
- (c) Damage or improper operation of unit caused by customer abuse, misuse, negligence, or failure to follow operating instructions provided with the product.
- (d) Ordinary adjustments to the product that can be performed by customer as outlined in the owner's manual.

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESS WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, SHALL APPLY TO THIS PRODUCT THEREAFTER.

INTELLITOUCH MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE. UNDER NO CIRCUMSTANCES SHALL INTELLITOUCH BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.





**877-465-3927**

**[www.eoswireless.com](http://www.eoswireless.com)**

**[www.eoswireless.com/eu](http://www.eoswireless.com/eu)**



### **Recycling Information**

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead please deliver it to the applicable collection point for the recycling of electrical and electronic equipment. By recycling this product correctly, you will help conserve natural resources and prevent potential negative environmental consequences. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.