


**converge**TM


English

Español


Français

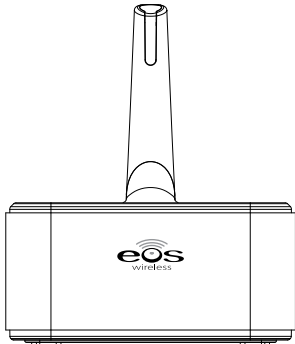

Transmitter
Transmisor
Transmetteur

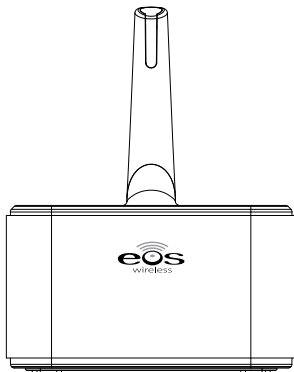

Receiver
Receptor
Récepteur

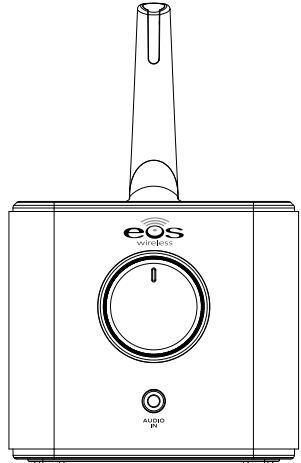

Amplified Receiver
Receptor Amplificado
Récepteur amplifié

User Manual

Manual del utilizador

Manuel d'utilisation



Thank You For Choosing Eos Wireless!

We hope you will get much enjoyment from our wireless audio system.

Please read the entire contents of this manual. It is filled with reference information that will allow you to get the most from your new Eos system. If you have any questions, please check our web site at www.eoswireless.com/support or call us at 877-465-3927.

Your Total Satisfaction – Eos Job #1

Congratulations on your purchase of the Eos Digital Wireless Multi-Room Audio System. We are committed to making sure your experience is problem free.

If you experience any difficulty and/or have any questions regarding the Eos system that are not addressed in this manual, please feel free to contact the Eos Technical Support Team, toll-free, at 877-465-3927 (between the hours of 8:30AM and 5PM pacific time.)

Our Eos Support Team aims to offer quick, comprehensive and thorough technical support to all our users. Before you call, please make sure you have your Eos unit model number and serial number on hand. These numbers can be found on the label located on the bottom of the unit.



877-465-3927

www.eoswireless.com



Safety Instructions	4
FCC Information	5
About the Converge Transmitter	7
Computer USB Connection	7
AUX IN - Non USB Connection	8
AUX IN Connection	8
Stereo System - Non USB Connection	9
Stereo System/Amplifier Connection	9
Operation	10
Transmitting USB Audio	11
Linking With Eos Receivers	11
Controls and Functions	12
About the Converge Wireless Receiver	13
Powering up your Converge Wireless Receiver	13
Connecting to a Home Stereo System	13
Connecting to Powered Multi-Media/Computer Speakers	14
Controls and Functions	15
About the Amplified Converge Wireless Receiver	16
Powering up your Amplified Converge Wireless Receiver	16
Speaker Connection	16
Auxiliary Audio Connection	17
Controls and Functions	18
Wireless Receivers/Speakers ID Settings	20
Linking Wireless Receivers/Speakers to a Specific Converge Transmitter	20
Setting a Unique ID	20
Adding a Speaker to a System with a Unique ID	21
Resetting the ID to Default	21
Range Extender	22
Limited Warranty	23



Important Safety Instructions

Please take the time to follow the instructions in this manual carefully. It will help you set up and operate your system properly and enjoy all of the advanced features. Please save this manual for future reference.

WARNING: To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture. Avoid prolonged exposure to direct sunlight.

WARNING: Liquids can cause a failure and/or a fire hazard. The unit should not be exposed to liquid dripping or splashing. Avoid placing objects filled with liquids, such as coffee cups, soda cans or vases on the unit. As with any electronic product, use care not to spill liquids into any part of the system.

WARNING: No open flame sources, such as lighted candles, should be placed on the unit.

Note: The product label is located on the bottom of the product. This product is intended to be used only with the power supply provided. Using another power supply can cause damage to the unit. This product is intended for indoor use. If used outdoors, care should be exercised in placing the product in an area that is well sheltered from the outdoor environment.

Safety Instructions

1. Read instructions before using this product.
2. Keep these instructions for future reference.
3. Heed all warnings on the product and in the manual.
4. Follow all instructions.
5. Do not use this unit near water or moisture. Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture are present.
6. Clean only with a dry cloth and as directed by IntelliTouch. Unplug this product from the power supply before cleaning.
7. Avoid prolonged exposure to direct sunlight or heat.
8. Do not install near any heat sources, such as radiators, heat registers, stoves or other unit (including amplifiers) that produce excess heat.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this unit during lightning storms or when unused for long periods of time – to prevent possible damage to this product.
11. Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as: power supply cord or plug is damaged; liquid has been spilled or objects have fallen into the unit; the unit has been exposed to rain or moisture, does not operate normally, or has been dropped. Do not attempt to service this product yourself.
12. Opening or removing covers may expose you to dangerous voltages or other hazards.
13. To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.
14. Do not let objects or liquids enter the product as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
15. Use proper power sources - Plug the product into a proper power source, as described in this manual or as marked on the product.

FCC Information

Information about products that generate electrical noise if applicable, this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the transmitter and/or receiver.
- Increase the separation between the equipment and transmitter and/or receiver.
- Connect the equipment to an outlet on a different circuit than the one to which the transmitter and/or receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

This device complies with RSS 210 of Industry Canada. "Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device."

This class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la class B est conforme à la norme NMB-003 du Canada.



A Consumer Guide to Product Safety

Eos Wireless Products are designed and manufactured by:

IntelliTouch
6370 Nancy Ridge Rd. #105
San Diego, CA 92121

Questions:

Visit www.eoswireless.com

Phone toll-free 877-465-3927

Warranty

Your Eos digital Wireless Speaker system is covered by a one-year limited warranty. For details see the Eos Warranty section of this manual. To register your product, go online to: www.eoswireless.com/registration

Technical Information

Wireless specifications:

150 ft. indoors / 300 ft. outside Range

1.5 Mbps Wireless Transmission Data Rate

Digital Spread Spectrum Technology

Dynamic Frequency Hopping Modulation Scheme

Operates in the 2400 to 2483 M Frequency Range

Proprietary Advanced Error Protection & Correction

Environmental Requirements

Operating temperature: 32° to 95° F (0° to 35° C)

Non-operating temperature: -4° to 113° F (-20° to 45° C)

Relative humidity: 5% to 95% non-condensing



About the Converge Transmitter

The Converge Transmitter can broadcast from virtually any audio source. The Converge Transmitter can be connected to a computer via USB, an external audio source such as an iPod/iPhone, other digital media players or anything with a headphone jack. The Converge Transmitter can also be connected to a home stereo or home theater system. The output of the Converge Transmitter can be connected to powered multi-media/computer speakers or a home stereo receiver/amplifier.


Computer USB Connection

Using the included USB cable, plug one end into the Converge Transmitter and the other end into an available USB port on a computer. Audio input and power to the Converge Transmitter is supplied through the USB port -- no additional cabling or external power is required.

An auxiliary audio source may also be connected by plugging in the supplied stereo headphone cable to the jack on the Converge Transmitter marked AUX IN. The other end of the cable can be connected to the headphone jack of any external audio device. You may toggle between inputs by pressing the source button located on the top of the Converge Transmitter.

Powered multi-media/computer speakers can be connected to the Converge Transmitter by plugging in the stereo jack from the speakers into the jack labeled AUDIO OUT.

- ▶ **IMPORTANT - Set the computer or external audio device's Volume output to maximum level. See "Operations" instruction on page 10 of this manual.**

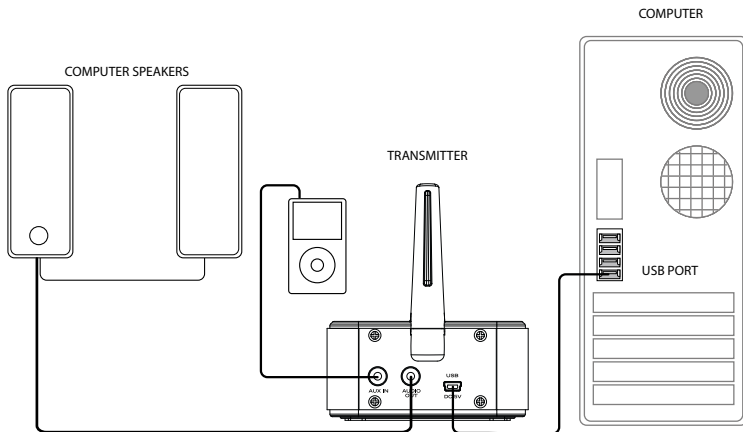

Converge Transmitter

AUX IN - Non USB Connection

By using the included power supply, the Converge Transmitter can function without connection to the USB port of a computer.


An auxiliary audio source may be connected by plugging in the supplied stereo headphone cable to the jack on the Converge Transmitter marked AUX IN. The other end of the cable can be connected to the headphone jack of any external audio device. Input from the external audio source will be broadcast to all Eos receivers/speakers. In this configuration only the AUX IN function is supported.

Powered multi-media/computer speakers can be connected to the Converge Transmitter by plugging in the stereo jack from the speakers into the jack labeled AUDIO OUT.

AUX IN Connection

The diagram below shows the connection using the stand-alone, non-USB connection to an external audio device.

- ▶ **IMPORTANT - For best performance set the external audio device's Volume output to maximum level. See "Operations" instruction on page 10 of this manual.**

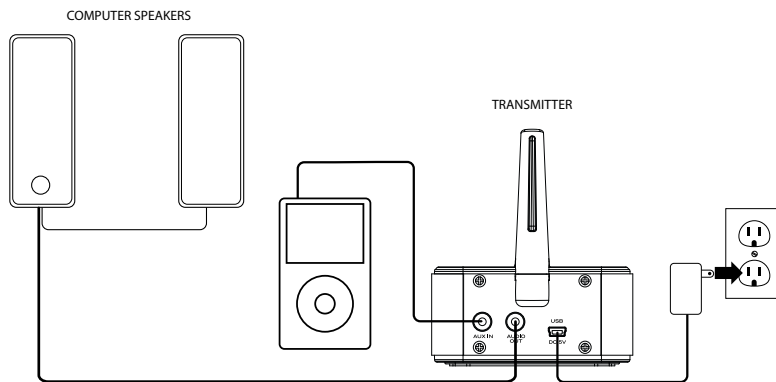

Stereo System - Non USB Connection


By using the included power supply, the Converge Transmitter can function without connection to the USB port of a computer.

A home stereo system may be connected by plugging in the supplied stereo headphone cable to the jack on the Converge Transmitter marked AUX IN. The other end of the cable can be connected to the headphone jack of the Stereo Receiver/Amplifier using a headphone jack adapter (not supplied). Output from the stereo system will be broadcast to all Eos receiver/speakers. In this configuration only the AUX IN function is supported.

Stereo System Connection

The diagram below shows the connection using the stand-alone, non-USB connection to a stereo receiver/amplifier.

- **Note - When connected to the line output of a Stereo System, the Volume output from the system has no effect on the output level of the Converge Transmitter.**

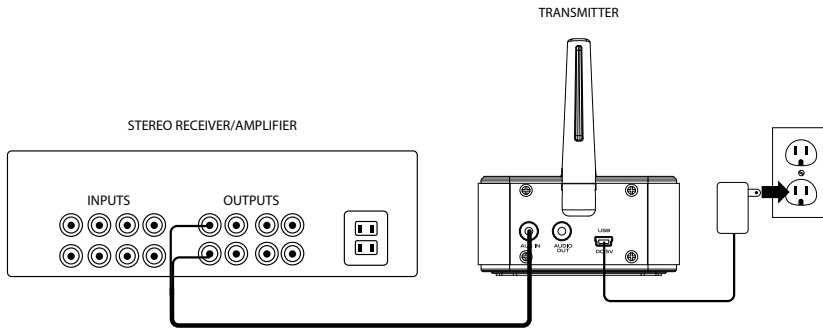

Converge Transmitter

Operation

Volume Settings

Set the Volume on your computer or other external audio device AS WELL AS your software based audio program (iTunes, Real Player, Windows Media Player...) to the Maximum Volume Level. When using web based internet radio like Pandora, Last FM, YouTube... make sure that the Volume level is ALSO set to the Maximum Level.

Powering up the Converge Transmitter

Once the Eos Converge Transmitter is connected to the USB port or external power supply, press the POWER button on the top of the Converge Transmitter. The LED in the antenna mast will illuminate as will the source LED confirming power.

Selecting Source

The default source is USB, press the source button to toggle between USB and AUX.

Windows Users

1. Plug your powered desktop speakers into the AUDIO OUT jack on the back of the Converge Transmitter.
2. Open the Control Panel from the "Start" menu and select "Sounds and Audio Devices."
3. Under the "Audio" tab, choose "Converge USB TX" for "Sound Playback."
4. Set PC's Volume level to the Maximum Output Level.

Your PC's sound will now be output through the Converge Transmitter as well as the AUDIO OUT jack.

► **NOTE- If no sound is output, restart iTunes or other software based audio playback program (like Windows Media Player, Real Player...). If using web based internet radio like Pandora, Last FM, YouTube... reload your the web page that is playing the audio content.**

Macintosh Users

1. Plug your powered desktop speakers into the AUDIO OUT jack on the back of the Converge Transmitter.
2. Open System Preferences and select "Sound" and Click on the "Output" tab.
3. Under the "Output" tab, select "Converge USB TX."
4. Set Mac's Volume level to the Maximum Output Level.

Your Mac's sound will now be output through the Converge Transmitter as well as the AUDIO OUT jack.



Operation

Transmitting USB Audio

1. Launch the audio application on your computer.
2. Set Volume level to the Maximum Output Level.
3. Select the play function from within the application.

Note: the Eos Converge Transmitter will transmit any audio played on any system application including, but not limited to iTunes, Windows Media Player, Real Player, Internet radio stations like Pandora, Rhapsody & Last FM...

Transmitting External Audio

The Eos system allows you to connect and play audio from an external source like an iPod or other MP3 player, satellite radio, CD player or other audio device with a headphone jack or analog audio output. Use the provided headphone cable to connect between the audio source and the Converge Transmitter.


1. Using the Source Button, select AUX (AUX LED will illuminate).
2. Set Volume level to the Maximum Output Level.
3. Press PLAY on the external audio device.

Linking With Eos Receivers/Speakers

You can link to up to 4 wireless Receivers/Speakers located up to 150 ft. away from the Eos Converge Transmitter. All Eos wireless Receivers/Speakers are shipped in an "open" position, meaning that they will automatically link with your Converge Transmitter as soon as they are turned on.

Wireless Receivers/Speakers can be associated to a specific Converge Transmitter, meaning that they will only receive signal from the Converge Transmitter that they were linked to. For instructions on how to associate your wireless Receivers/Speakers to a specific Converge Transmitter see the section titled "Wireless Receivers/Speakers ID Settings".

Controls and Functions

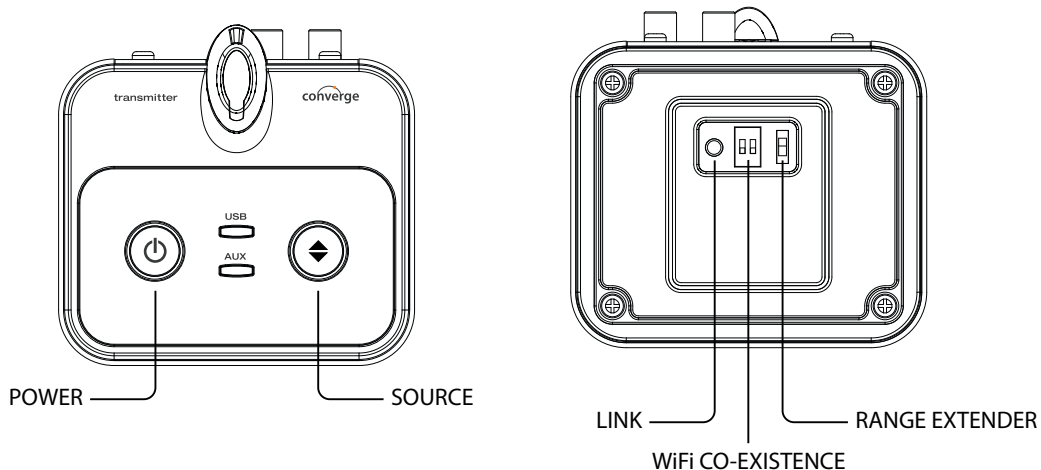

Power On/Off - Switches the power to the wireless transmitter on/off

Source – Switches between USB sound input and auxiliary input

Audio Out – Allows connection of powered desktop speakers

Range Extender – Extends the transmission range of the Eos system. Use only if transmission problems occur. for more information see “*Range Extender*” section on page 22 of this manual.

WiFi Co-Existence - Default position On/On. Use only if there are problems when if close range to a WiFi router or other radiating device.

Link Button – Used to register speakers to a specific Converge Transmitter. For operation, see “*Wireless Speakers/Receiver ID Settings*” on page 20 of this manual.

About the Converge Wireless Receiver


The Converge Wireless Receiver is designed to connect to your main home audio system or to powered computer speakers. The Receiver features controls allowing you to control the play/pause and track forward and back on iTunes and other software based media players.

Powering up your Converge Wireless Receiver

1. Connect power supply to jack marked DC5V
2. Toggle on Power Switch on rear of receiver. The antenna LED will illuminate confirming power.

Connecting to a home stereo receiver

1. Using the provided RCA to RCA stereo cable, connect cable to the rear of the Converge Wireless Receiver unit marked AUDIO out.
2. Connect the other end of the cable into any available audio input jack of your main home audio system receiver.
3. Using your home stereo receiver's input selector switch, select the input that you connected the Converge Wireless Receiver into.
4. When selected, audio from the Converge Transmitter will play from your home stereo system's receiver. Adjust volume level from the stereo receiver.

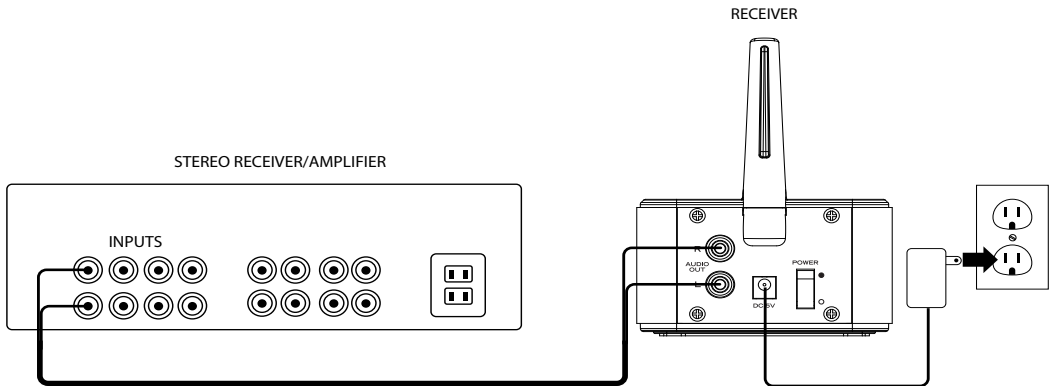


Converge Wireless Receiver


Connecting to Powered Multi-Media/Computer Speakers

Using the provided "Y" cable, connect RCA cables to the rear of the Converge Wireless Receiver unit marked AUDIO out.

1. Plug the cable from the powered speakers into the jack on the end of the "Y" cable.
2. Switch the Receiver's power switch ON
3. Turn the powered speakers ON and audio from the Converge Transmitter will begin playing.
4. Adjust the sound level from the powered speakers volume control.

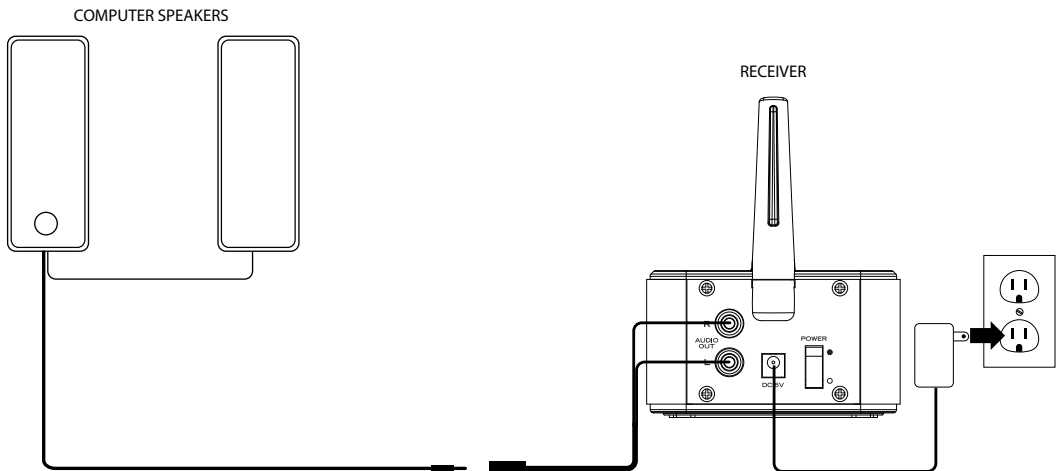

Controls and Functions

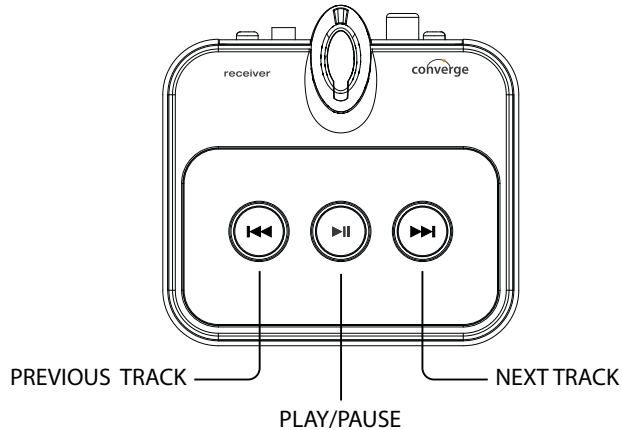

Function Buttons

When the Eos Converge Transmitter is connected to a computer, you can use the buttons on the Converge Wireless Receiver to control play/pause and track forward/back on iTunes and many other computer based music player programs.

- **Note:** feature buttons cannot be used to control an iPod or other device that is connected via the AUX input; nor can they be used to control streaming Internet radio stations.

Antenna LED Indicator Light

The antenna on the Receiver is equipped with a blue LED that tells the operational status.

- LED on solid = power on, linked with Converge Transmitter.
- LED on blinking = power on, not linked with Converge Transmitter.

Note: If there is no connection within one minute, the unit will enter a sleep mode and turn off the amplifier and the antenna LED. The unit will continue to check for a wireless connection and will automatically connect with the Converge Transmitter signal as soon as it is detected.

Amplified Converge Wireless Receiver

About the Amplified Converge Wireless Receiver


The Eos Converge Amplified Wireless Receiver is designed to be used as a stand-alone receiver in conjunction with bookshelf type speakers. Optionally, a powered sub-woofer can be connected to the receiver.

Powering up your Converge Wireless Receiver

1. Connect power supply to jack marked DC24V
2. To power on the Amplified Converge Wireless Receiver, press the volume knob. The ring around the volume knob will illuminate as will the LED on the antenna mast.

Speaker Connection

The diagram below shows the connection using bookshelf speakers. For extra bass, a powered subwoofer can be connected to the Amplified Converge Wireless Receiver.

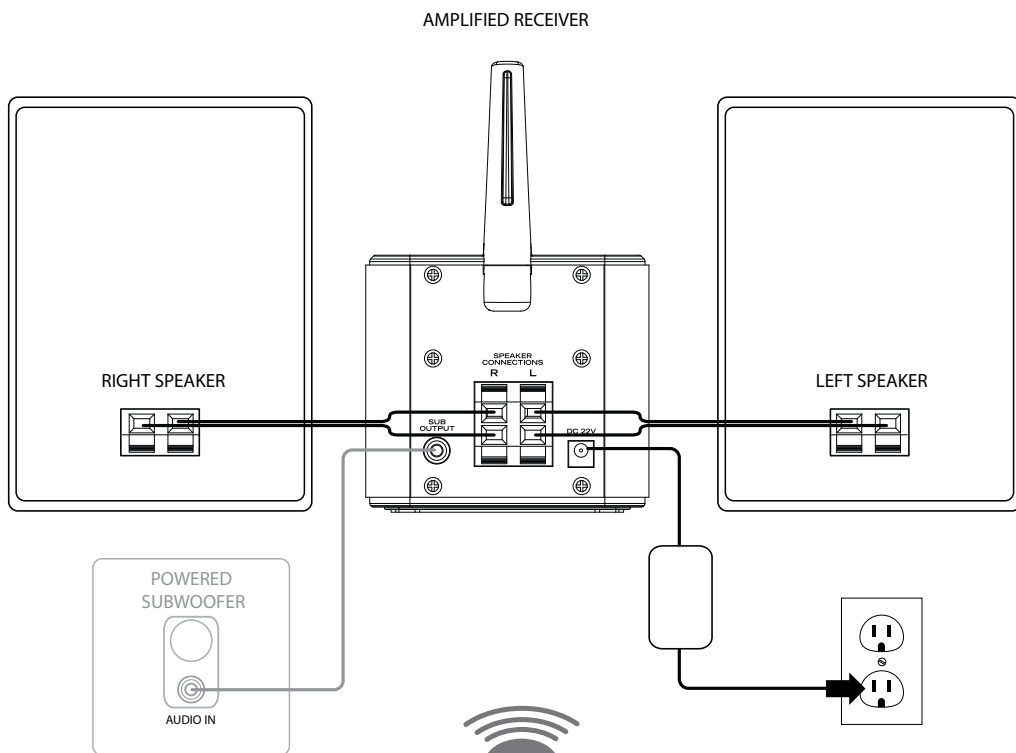


Auxiliary Input

The Eos Converge Amplified Wireless Receiver can also take direct audio input from the auxiliary input jack located on the front of the receiver.

Auxiliary Audio Connection


Using the supplied 3.5mm stereo cable, plug one end into the headphone jack of the desired audio source and the other end into the AUX IN jack located on the front of the receiver.

- **Note** - Plugging in the mini cable to the receiver will automatically switch the source from the wireless connection to the auxiliary connection.

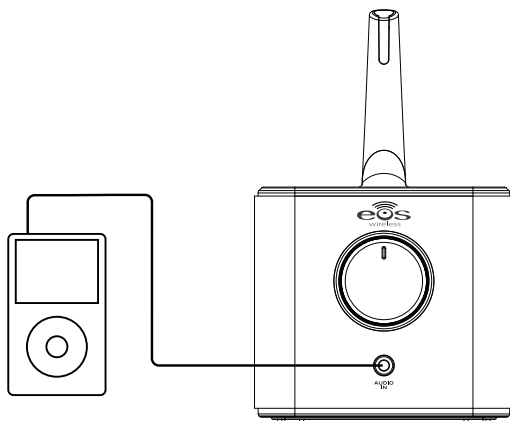

Amplified Converge Wireless Receiver

Controls and Functions

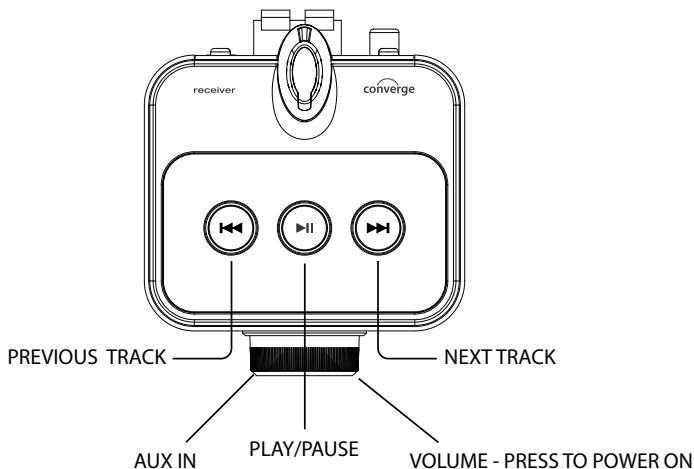

Power & Volume Control

To power on the Amplified Converge Wireless Receiver, press the volume knob. The ring around the volume knob will illuminate as will the LED on the antenna mast.

Function Buttons

When the Eos Converge Transmitter is connected to a computer, you can use the buttons on the Converge Wireless Receiver to control play/pause and track forward/back on iTunes and many other computer based music player programs.

Note: feature buttons cannot be used to control an iPod or other device that is connected via the AUX input; nor can they be used to control streaming Internet radio stations.

AUX IN jack

Use the 3.5mm stereo audio cable to connect an audio source directly to the amplifier. Plugging in a cable to this connector will automatically switch the source from the wireless input to the AUX IN input.

Controls and Functions

Antenna LED Indicator Light

The antenna on the Receiver is equipped with a blue LED that tells the operational status.

- LED on solid = power on, linked with Converge Transmitter.
- LED on blinking = power on, not linked with Converge Transmitter.

► **Note:** If there is no connection within one minute, the unit will enter a sleep mode and turn off the amplifier and the antenna LED. The unit will continue to check for a wireless connection and will automatically connect with the Converge Transmitter signal as soon as it is detected.

Wireless Receivers/Speakers ID Settings

All Eos Converge Transmitters, Wireless Speakers and Receivers have the same ID setting. This is done so Receivers/Speakers will automatically link with any Converge Transmitter. The Converge Transmitter will link with the first 4 Wireless Receivers/Speakers that it detects.

Linking Wireless Receivers/Speakers to a Specific Converge Transmitter

Due to the incredible range of the Eos system, it is possible for your speakers to receive audio from a neighbors system. If this happens, or if you wish to run more than one Eos Wireless System in your house, you can give your Converge Transmitters and the Receivers/Speakers a unique ID. In giving your system a unique ID your Receivers/Speakers will link only to the Converge Transmitter that they are paired to.

Setting a Unique ID

To give your Converge Transmitter and Receivers/Speakers a Unique ID, do the following:

1. Turn the power OFF on the Converge Transmitter
2. Turn OFF all power to the Wireless Receivers/Speakers that you wish to link.
3. Turn the power ON on the Converge Transmitter
4. Press and hold the "LINK" button on the bottom of the Converge Transmitter for **3 seconds** until the "Link LEDs" on the Antenna mast starts blinking.
5. Turn on the Wireless Receivers/Speakers that you wish to link to this Converge Transmitter within 60 seconds of pressing the "LINK" button.

Note: to link additional speakers once a unique ID has been set, refer to the "Adding a Speaker to a System with a Unique ID" section on the following page.

Adding a Receiver/Speaker to a System with a Unique ID

Once a unique ID is set on your Converge Transmitter, you will need to do the following to link additional speakers to your Converge Transmitter: Please note - this procedure is only necessary if you have set a unique ID for your Converge Transmitter.

1. Turn the power OFF on the Converge Transmitter
2. Turn OFF power to the Wireless Receivers/Speakers that you wish to link.
3. Turn the power ON on the Converge Transmitter
4. Press and hold the "LINK" button on the bottom of the Converge Transmitter for **8 seconds** until the Antenna LED starts blinking and then release button.
5. Turn on the Wireless Speaker/Receivers that you wish to link to this Converge Transmitter one at a time within 60 seconds of pressing the "LINK" button.

Note: When Link button is pressed and held, the "Antenna link LEDs" on the Converge Transmitter will blink slowly for a few seconds and then go to a fast blink (fast blinking indicates the Converge Transmitter is in "Add a Speaker Mode")

Resetting the ID to Default

To reset the Converge Transmitter and Receiver/Speaker's ID back to the factory default, do the following:

1. Turn OFF power to the Converge Transmitter
2. Turn OFF all power to the Wireless Receivers/Speakers.
3. While pressing and holding the "LINK" button on the bottom of the Converge Transmitter, press the Power ON button on the Converge Transmitter. Continue to hold the "LINK" button for about 3 seconds until the Antenna Mast LED begins to flash.
4. Release "LINK" button
5. Turn ON the Wireless Receivers/Speakers within 60 seconds of releasing the "LINK" button.

Note: Allow each Wireless Receiver/Speaker to Link before turning on the next Wireless Speaker/Receiver. After completing steps 1-5, speakers will be set to the factory default ID and will be able to link with your Converge Transmitter or any other Converge Transmitter with the factory default ID in the vicinity.

Range Extender

The Range Extender Switch, located on the bottom of the Converge Transmitter, allows you to increase the effective range of the Eos Wireless System. Use this button only if you are having difficulty linking up your Wireless Receivers/Speakers.

About Range Extender

To maintain a solid, interference free link, the Eos system incorporates an advanced proprietary error correction scheme. Error correction is done by creating a slight delay between the Converge Transmitter and Wireless Speaker. Using this delay, Eos can confirm that the audio packets arrive at the Wireless Speaker/receiver. If the audio packet is not received, the Eos Converge Transmitter can resend it. Eos' default delay (Range Extender Off) is 20ms.

Turning on the Range Extender Switch increases the delay to 64ms. The increased delay allows Eos to resend more audio packets due to distance from the Converge Transmitter or ambient interference.

Note: Due to the 64ms delay, if an Eos Converge Transmitter and Wireless Speaker are in the same room, a slight "echo" effect is apparent.



Recycling Information

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead please deliver it to the applicable collection point for the recycling of electrical and electronic equipment. By recycling this product correctly, you will help conserve natural resources and prevent potential negative environmental consequences. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Limited Warranty

IntelliTouch warrants this product to be free from manufacturing defects in material and workmanship under normal use and conditions for a period of 1-year from date of original purchase in the United States. In order to validate your warranty, you must register your product by going on-line (www.eoswireless.com), or by calling 877-465-3927 between Monday through Friday, 8:30AM to 5PM Pacific Time. For Warranty service outside the United States, contact the reseller that you purchased the Eos product from.

Should service be necessary under this warranty for any reason due to manufacturing defect during this 1-year period from date of original purchase, IntelliTouch will either repair the unit or replace it with a reconditioned unit at no charge.

U.S. Warranty Service - You must call (877-465-3927) to obtain a return authorization number prior to sending your product in for service.

Pack the unit in a well-padded, heavy, corrugated box.

- Include a note with reason for return along with RMA number and return shipping information.
- Enclose proof of purchase.
- Enclose your check or money order payable to IntelliTouch in the amount of \$20.00 to cover shipping and handling costs.
- Enclose your name, return address and contact number.
- Ship the unit prepaid via UPS or parcel post (insured).

This warranty is void if the product is:

1. Damaged through negligence, misuse, abuse, moisture or accident.
2. Modified in any way.
3. Damaged because it is improperly connected to the equipment of other manufacturers.

This warranty does not cover:

1. Damage to equipment not properly connected to the product.
2. Costs incurred in the shipping of the product to IntelliTouch.
3. Damage or improper operation of unit caused by customer abuse, misuse, negligence, or failure to follow instructions in the manual provided with the product.
4. Ordinary adjustments to the product that can be performed by customer as outlined in the manual.
5. Damage to computer or audio equipment



877-465-3927

www.eoswireless.com